
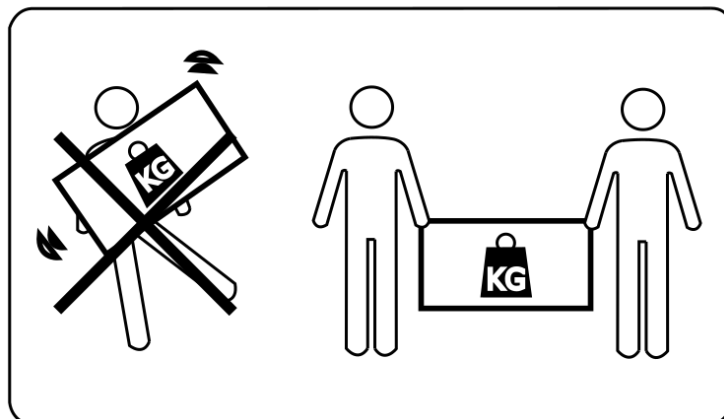
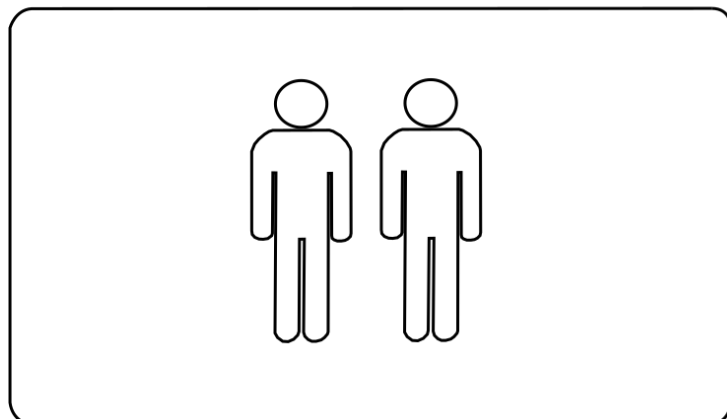
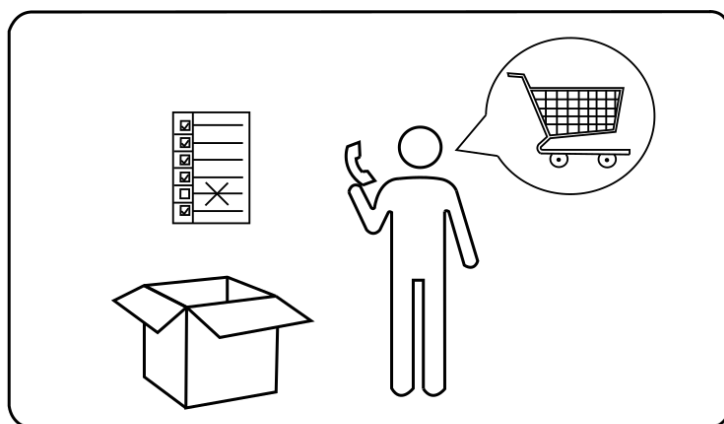


Monro/Roma/Reston Lova

Monro/Roma/Reston bed

Monro/Roma/Reston кровать

SURINKIMO INSTRUKCIJA / ASSEMBLY INSTRUCTION / ИНСТРУКЦИЯ ПО МОНТАЖУ

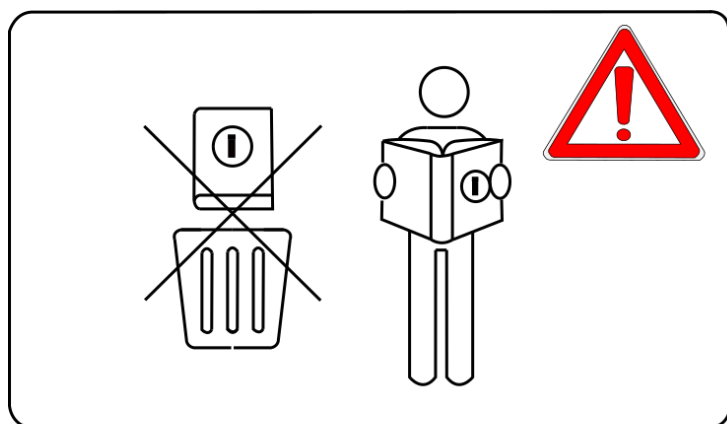






Monro/Roma/Reston Lova


Monro/Roma/Reston bed

Monro/Roma/Reston кровать


1

A	
	M8 - 4 vnt.
	M8 - 4 vnt.
	4 vnt.



B	
	M6x35 mm - 2 vnt.
	2 vnt.

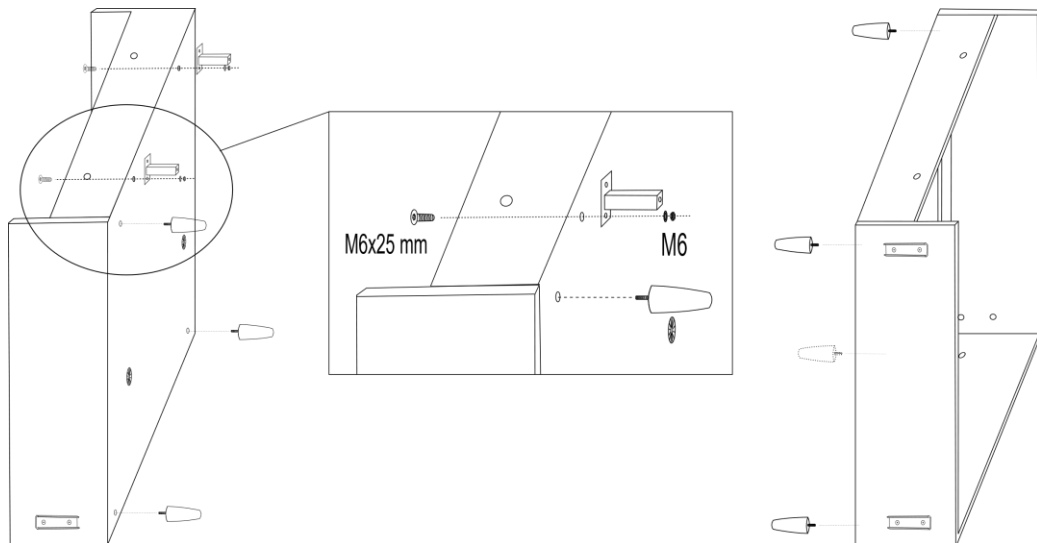


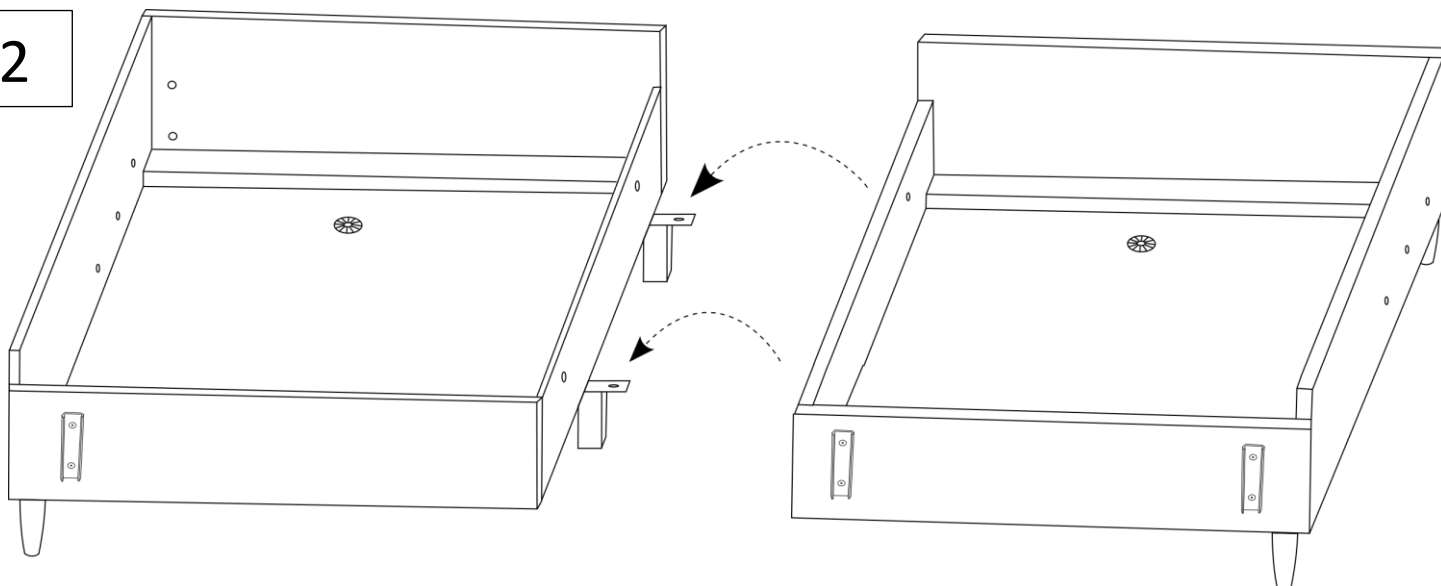


2

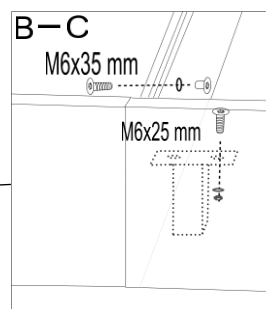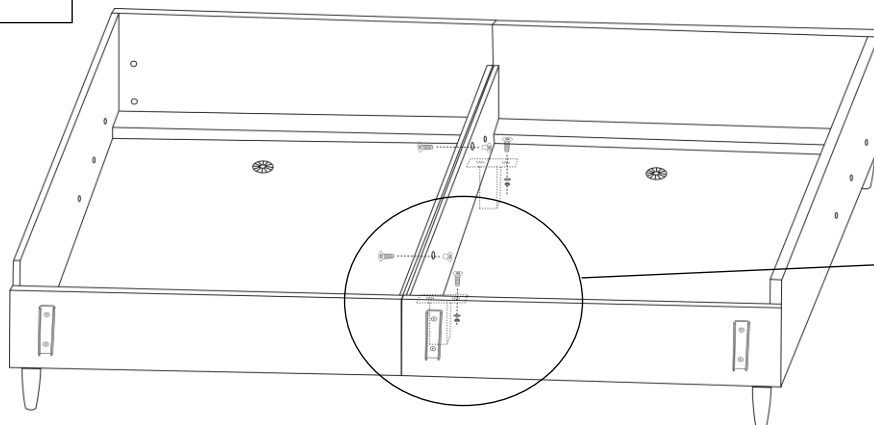

3








C	
	M6 - 4 vnt.
	M6 - 4 vnt.
	2 vnt.
	M6 x 25 mm - 4 vnt.

Monro/Roma/Reston Lova

Monro/Roma/Reston bed

Monro/Roma/Reston кровать

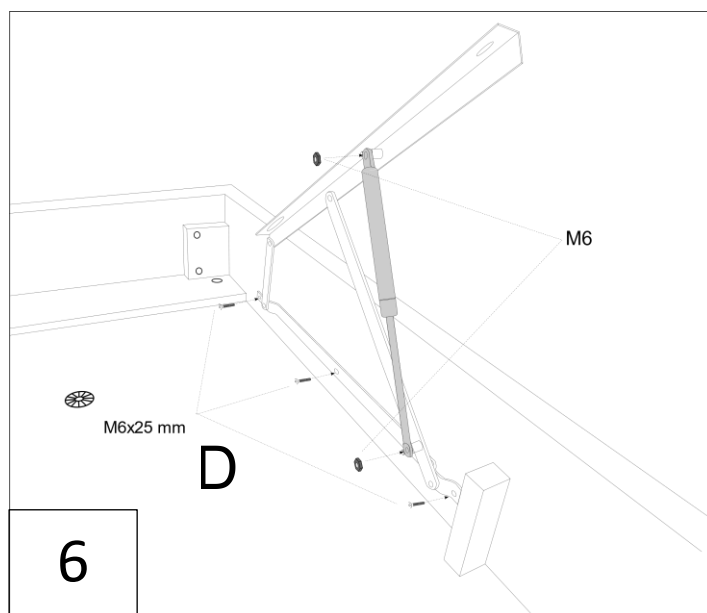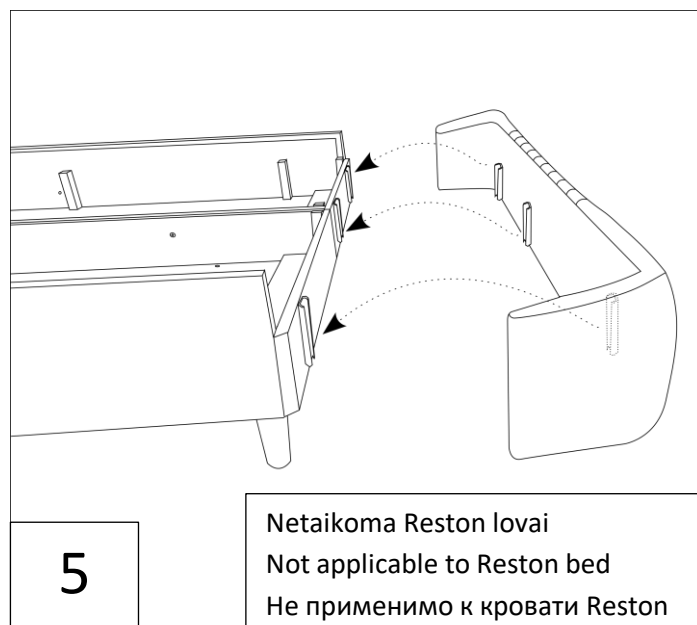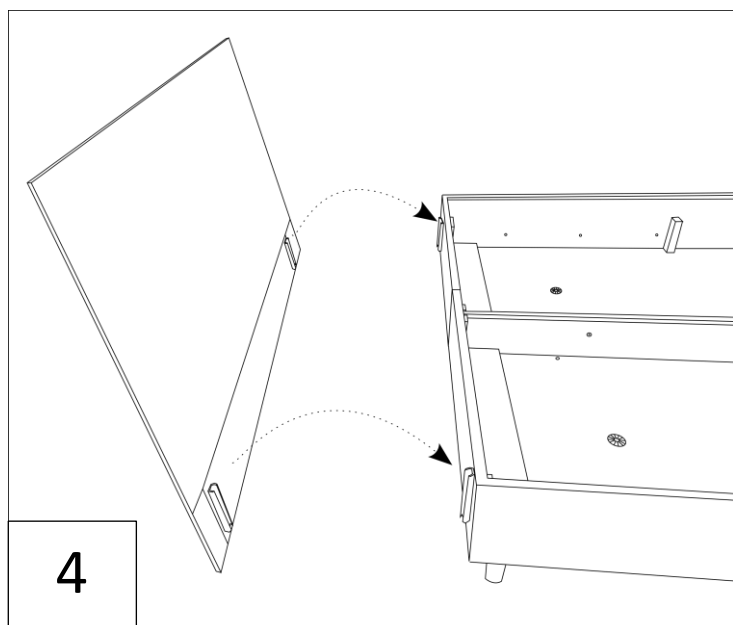


D	
	M6 - 4 vnt.
	M6 x 25 mm- 6 vnt.




Monro/Roma/Reston Lova

Monro/Roma/Reston bed

Monro/Roma/Reston кровать

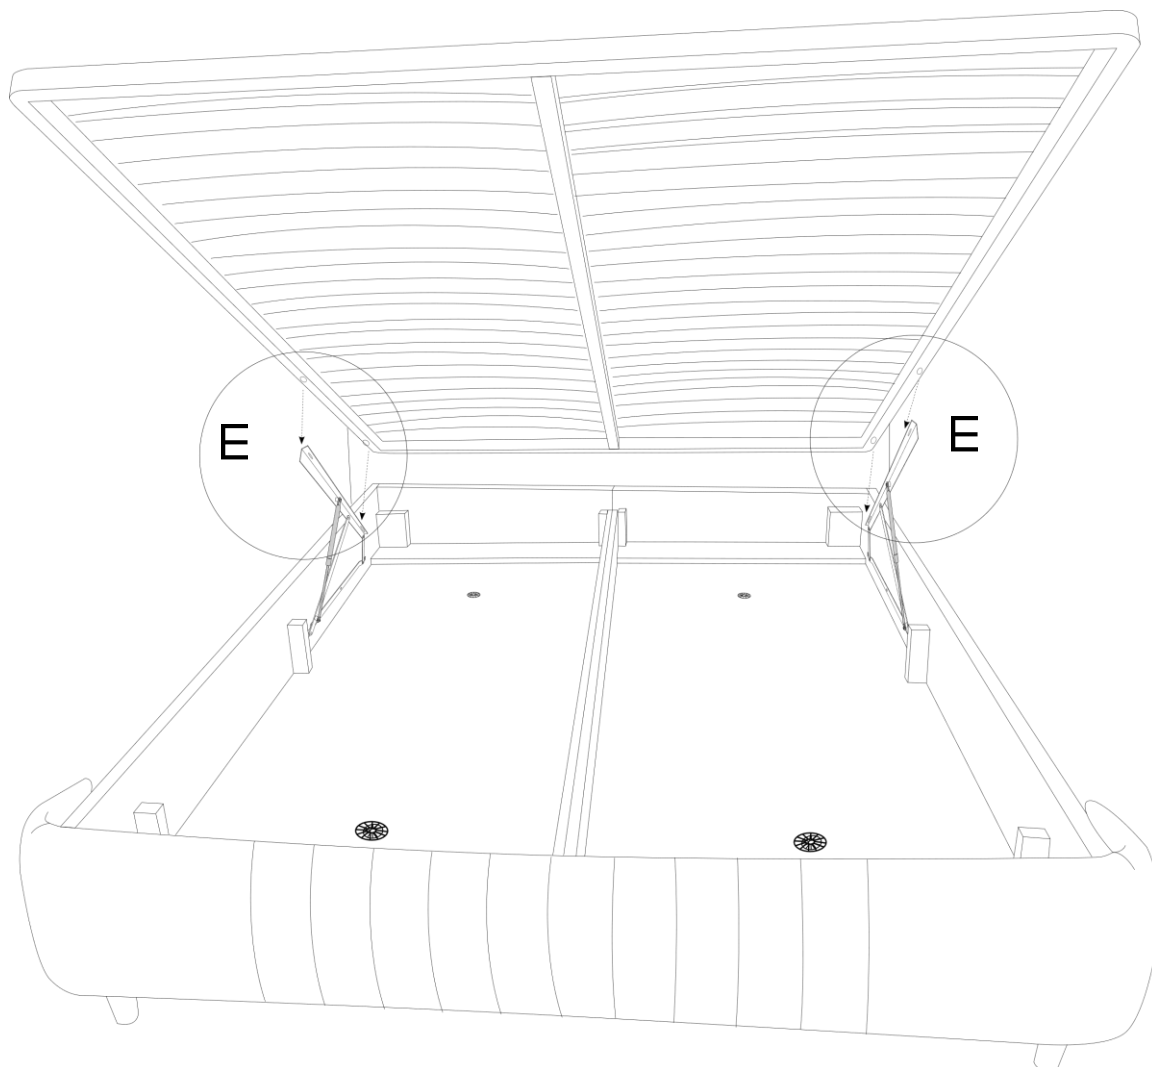7



E	
	M8 - 4 vnt.
	M8 - 4 vnt.
	M8 x 55 mm- 4 vnt.